

Matricom XYBA Gamepad

For your enjoyment and safety, we recommend that you read this manual thoroughly before using this product and keep this manual handy for reference if needed.

Characteristics:

1. Compatible with Android and PC
2. Wireless
3. D-Pad and 12 buttons
4. Dual analog joysticks
5. Effective distance: about 30 feet (10m)
6. Turbo button
7. Dual vibration motors

Description:

1. Material: ABS
 2. Net Weight: 161g +/- 10g
 3. Battery: lithium battery inside
 4. Connector: USB to Micro USB
 5. Measurements: 15.7 x 9.9 x 6.0 cm
-

Device Connection

Please use the button combinations to enter into any of the following modes. The indicator light will illuminate to indicate that the mode has been activated:

Mode	Button Combo	Indicator Light
Gamepad	A + Mode	①
Gamepad	B + Mode	①
Keyboard & Mouse	Y + Mode	②
iOS	X + Mode	① ②

Gamepad Mode:

When the gamepad is turned off, press the X and the Mode button at the same time. When the lights begin flashing quickly, connect to the device using your phone or PC. Some games require the input controls to be set prior to playing. Consult your game's manual if needed.

Keyboard & Mouse Mode:

When the gamepad is turned off, press the A and the Mode button at the same time. When the lights begin flashing quickly, connect to the device using your phone or PC. The joystick will act like a mouse for the system.

iOS Mode:

When the gamepad is **turned off**, press the B and the Mode buttons at the same time. When the lights begin flashing quickly, connect to the device using your phone.

(Note: This mode is only supported by iOS and not Android.)

Sync Reconnect

If the gamepad is connected with your equipment before, the gamepad can connect to your equipment automatically.

1. Make sure the device you would like to connect to is powered on.
2. Check that the gamepad is known by the device.
3. Press the Mode buttons once.
4. Once connected, the gamepad's LEDs will light up.

Note: Not all Android games support gamepads.